

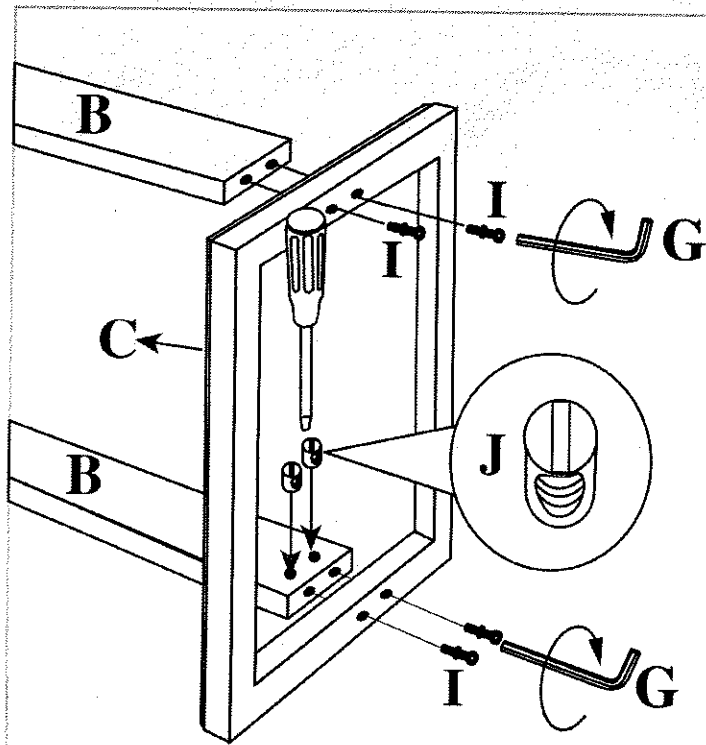


# MIRROR JEWELLERY CABINET

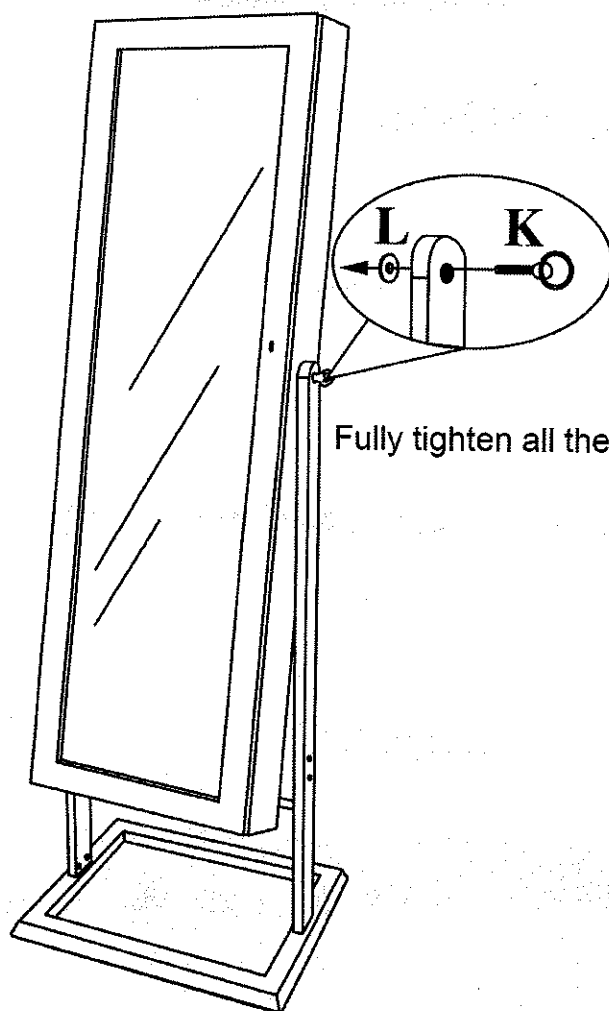

Insert I to B ,then put H in,screw it clockwise.

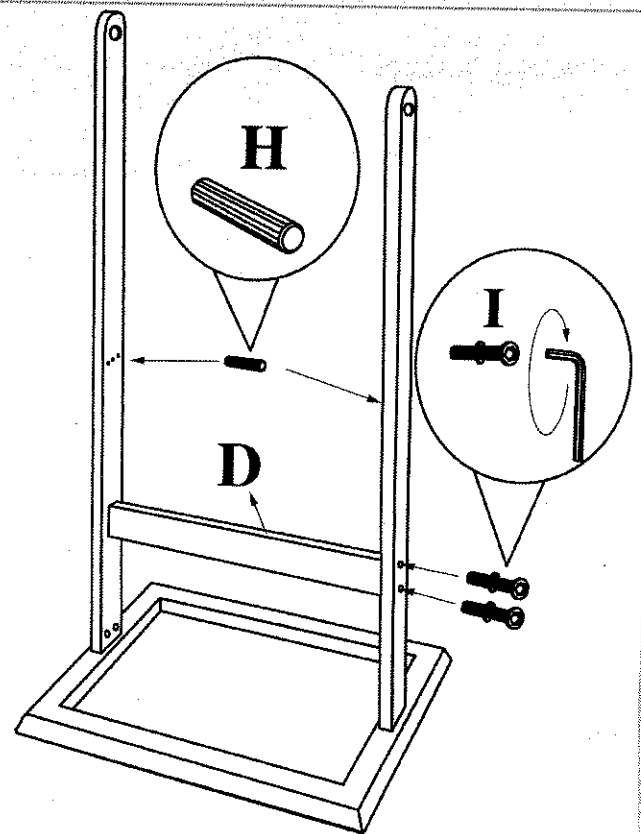

Fully tighten all the bolt.

