



33

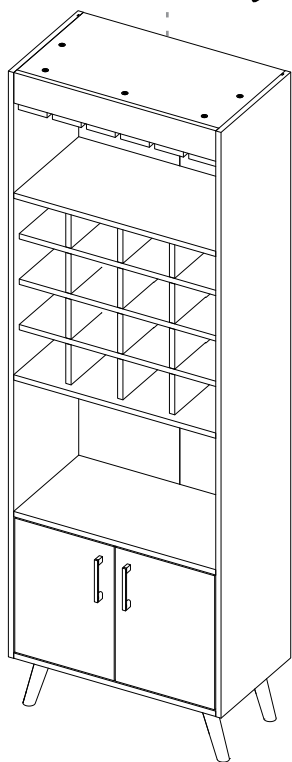

Por la seguridad del usuario se recomienda anclar el mueble a la pared.

For the user safety, it is recommended to anchor the cabinet to the wall.

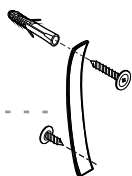

-¡ADVERTENCIA! PELIGRO DE VOLCAMIENTO - Los muebles no anclados a la pared pueden volcarse.

-¡ADVERTENCIA! Compruebe que no haya tubos o cables ocultos antes de perforar la pared.

-¡ADVERTENCIA! Si sus paredes no son sólidas como ladrillo o concreto, necesitará anclaje especial (no suministrado).

-Pre-taladre un pequeño orificio piloto en el borde posterior de la parte superior del mueble con una broca de 2mm. Fije el otro extremo de la tira de fijación al borde posterior del mueble con el tornillo de 15mm + arandela y apriete firmemente.

-Coloque la tira de fijación contra la pared y marque la posición para perforar.

-Haga un agujero en la pared a una profundidad de 30mm con una broca de 6mm. Si la superficie de su pared es suave y desmoronadiza, le recomendamos que use una broca de 5mm para un ajuste más apretado.

-Inserte el chazo plástico en el orificio con el extremo al ras de la superficie de la pared.

-Fije la tira de fijación a la pared con el tornillo de 25mm + arandela y apriete firmemente.

WARNING! TIPPING HAZARD – Unanchored furniture can tip over

-WARNING: CHECK FOR HIDDEN PIPES AND CABLES BEFORE DRILLING.

-IMPORTANT: IF YOUR WALLS ARE NOT SOLID LIKE BRICK OR STONE, YOU WILL REQUIRE SPECIALIST FITTINGS (NOT SUPPLIED)


-Pre-drill small pilot hole on the back edge of the furniture top using a 2mm drill bit. Attach the other end of the fixing strip to the back edge of the furniture top using the 15mm screw + washer and securely tighten.

-Place fixing strip against the wall and mark position for drilling hole.

-Drill hole in your wall to a depth of 30mm using a 6mm drill bit. If the surface of your wall is soft and crumbly, we would advise you to use a 5mm drill bit for a tighter fit.

-Insert plug into hole with end flush to the wall surface.

-Attach fixing strip to the wall using the 25mm screw + washer and securely tighten.

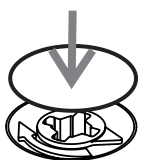

Después de ajustar todas las cajas minifix, cúbralas con las tapas adhesivas.

After you finish the adjustment of the cams, cover them with the cover caps.


A

Al terminar de armar, despegue las letras adhesivas.

After you finish assembling the cabinet, take off the adhesive letters.

RTA
muebles

INSTRUCCIONES DE ENSAMBLE ASSEMBLY INSTRUCTIONS

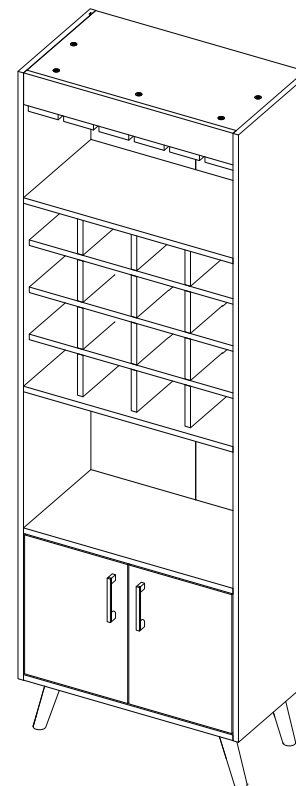

Alto: 180 cm
Ancho: 60 cm
Fondo: 34 cm

Height: 70,87 in
Width: 23,62 in
Depth: 13,39 in

LOT N°

REF./SKU. BLC 5404

Tel - (572) 691 17 00
PBX - (572) 695 91 81
Yumbo - Valle del Cauca - Colombia
www.rta.com.co

BAR Z 60
60 Bar Z

RECOMENDACIONES IMPORTANTES

No pintar el mueble.

El mueble debe ser usado únicamente en interiores, no exponer al sol directo.

Limpiar los herrajes metálicos con un paño seco.

NO sobrecargar el mueble (ver las cargas sugeridas).

No golpear ni martillar el mueble (solo cuando se indique).

Limpiar con un paño ligeramente húmedo, usar jabones suaves.

No arrastre el mueble, levántelo entre dos personas.

Evite el contacto directo con el agua, el fuego o la exposición a fuentes de calor.



ADVERTENCIA

Nunca permita que los niños escalen o manipulen el mueble, la caída de este puede provocar lesiones graves o la muerte.

IMPORTANT RECOMMENDATIONS

Do not paint the cabinet.

The cabinet **MUST** be used exclusively indoors, do not expose to direct sun.

Clean metallic hardware with a dry cloth.

Do **NOT** overload the cabinet (see suggested loads).

Do not hit or hammer the cabinet (just when indicated).

Clean with a slightly damp cloth, use gentle soaps.

Do not drag, lift and move between two people.

Avoid direct contact with water, fire or exposure to heat sources.





WARNING


Never allow children to climb or manipulate the cabinet, furniture tip over can cause serious injuries or death.

Instalación de las puertas Door Installation


32

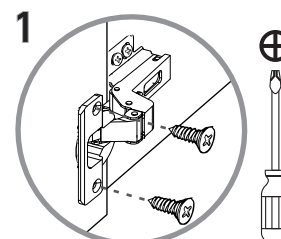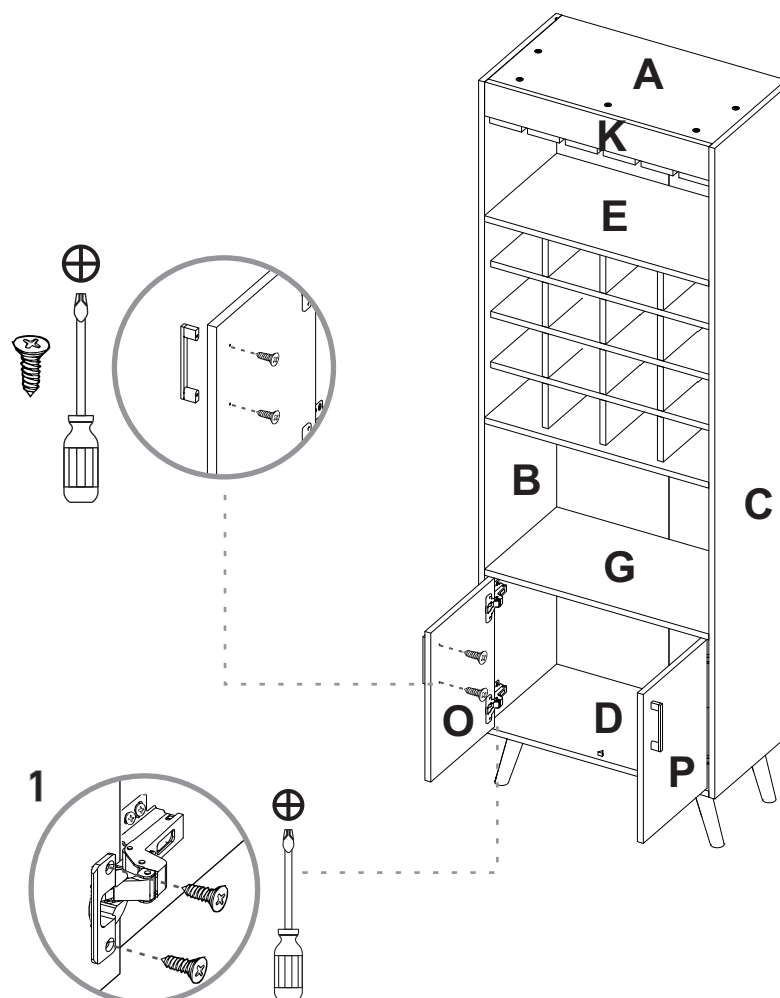


Ajuste de las bisagras
Hinge adjustment

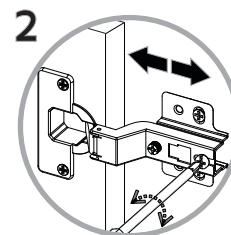


Ajuste de profundidad
Depth adjustment

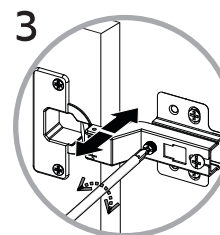


Ajuste lateral
Side adjustment

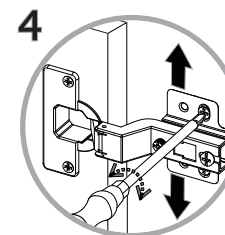

Ajuste de altura
Height adjustment

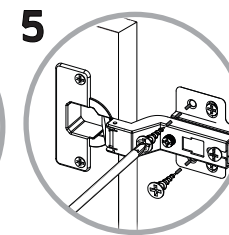


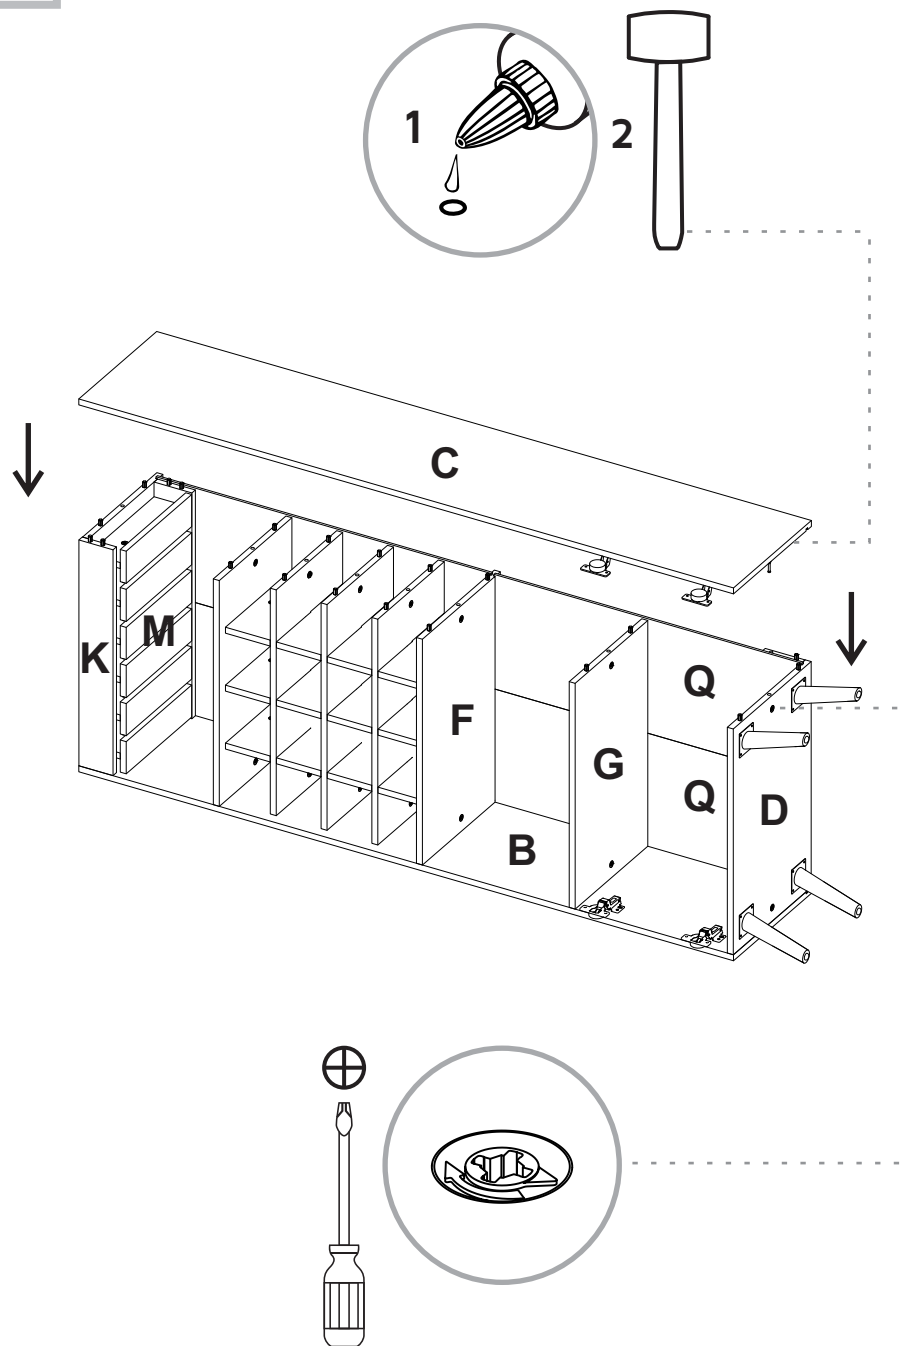

ÍNDICE INDEX

Herrajes para armado Assembly Hardware	4
Piezas de armado Assembly Parts	5
Cargas sugeridas Suggested loads	6
Recomendaciones de ensamble Assembly recommendations	6
Pasos de armado Assembly steps	7-24

HERRAMIENTAS NECESARIAS* REQUIRED TOOLS*

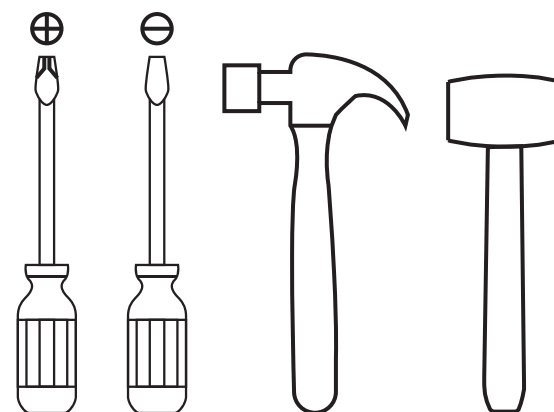


*No incluidas y no se muestran en tamaño real.
*Not included, and not shown actual size.

HERRAJES PARA ARMADO ASSEMBLY HARDWARE


Compruebe que el contenido de los herrajes sea el correcto. En caso de que falte alguna pieza, por favor llame a nuestra línea de atención al cliente.

Please check that the hardware content is correct. If any item is missing, please call to our customer service line.



x72

Tarugo
Wood Dowel

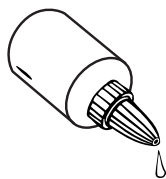

x3

Pegante
Glue



x45

Minifix
Minifix Cams



x45

Perno Minifix
Spreading Bolt




x45

Tapa Adhesiva
Minifix
Cover Caps




x16

Tornillo Lámina
Flat Head Screw



x1

Soporte Entrepaña
Shelf support




x2

Manija
Handle




x4

Pata
Steel Leg

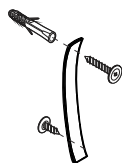

x2



Kit Antivuelco
Wall Fixing Kit








x4

Bisagra Interior
(Incluye Tornillos)
Inset Hinge
(Screws included)


Deslizar Dentro
Slide Inside

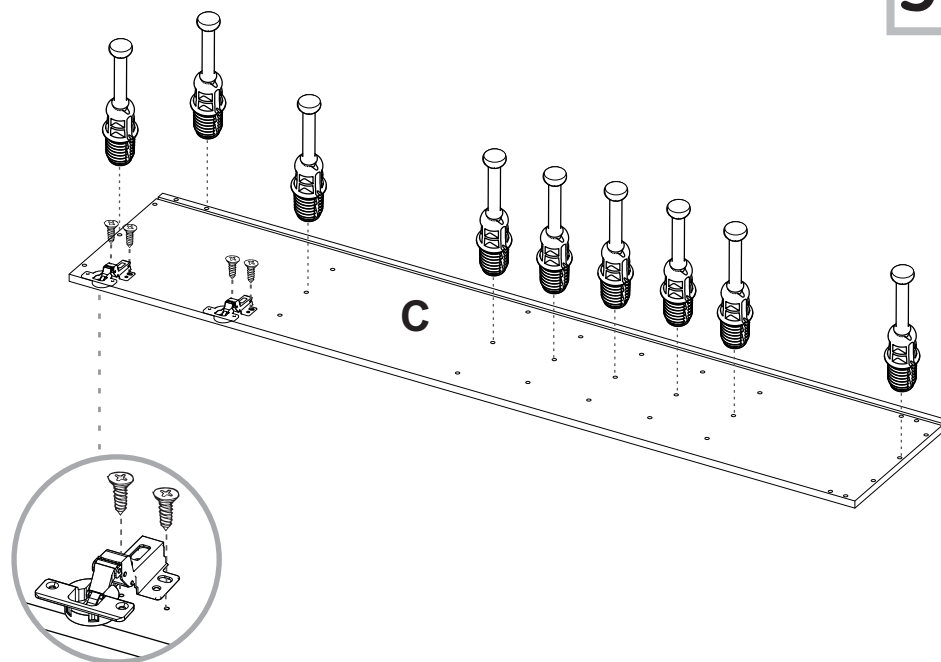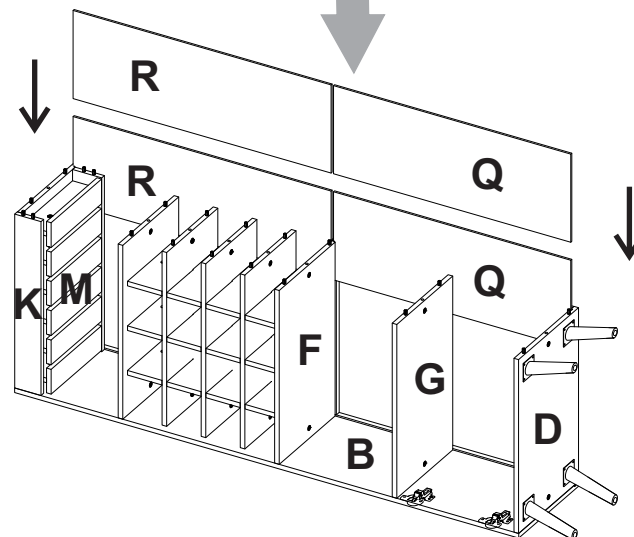

27

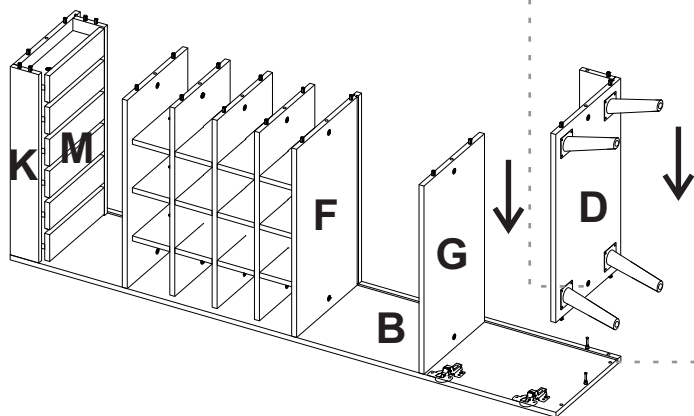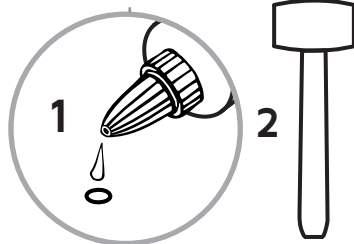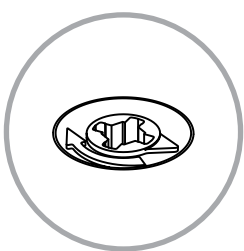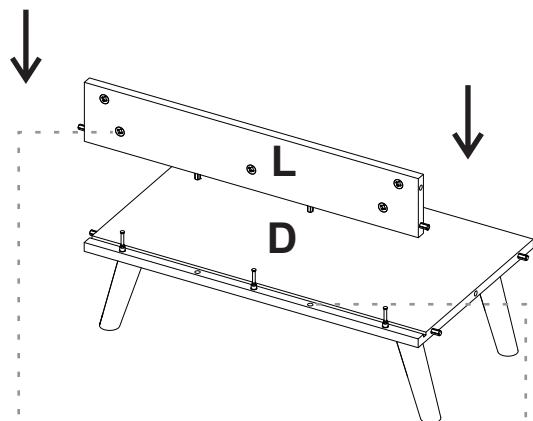


PIEZAS DE ARMADO ASSEMBLY PARTS

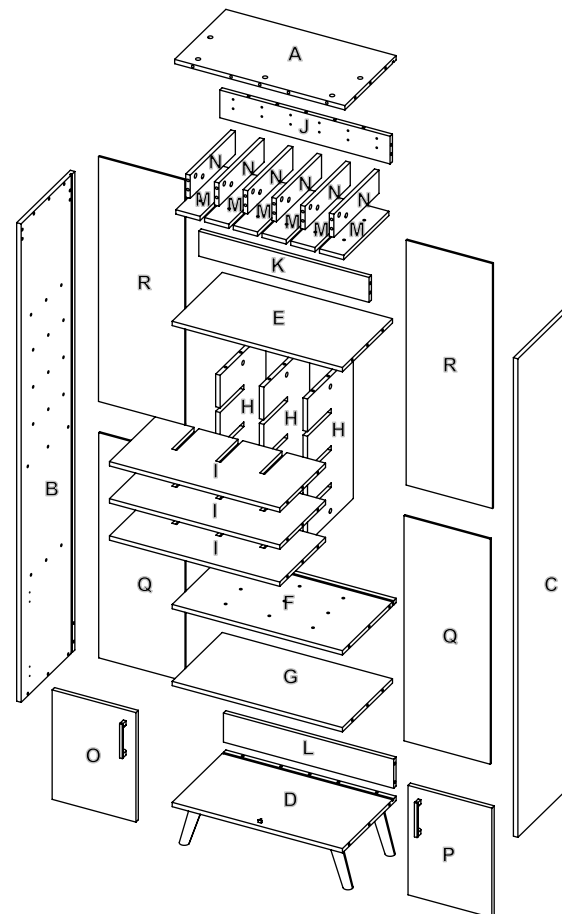

A - x1	F - x1	K - x1	P - x1
B - x1	G - x1	L - x1	Q - x2
C - x1	H - x3	M - x6	R - x2
D - x1	I - x3	N - x6	
E - x1	J - x1	O - x1	

MAX SUGGESTED LOADS CARGAS MÁXIMAS SUGERIDAS

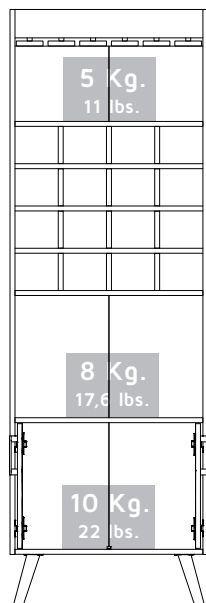

ASSEMBLY RECOMMENDATIONS RECOMENDACIONES DE ENSAMBLE

Ensamble el mueble entre dos personas.





Assemble the cabinet between two people.

Ensamble el mueble sobre una superficie plana y lisa, preferiblemente sobre un tapete o el cartón de la caja


Assemble the cabinet on a flat, smooth surface, preferably on a carpeted floor or the box carton.

Lea cuidadosamente las instrucciones e identifique todas las piezas y herrajes antes de empezar a armar el mueble.


Carefully read all the steps and identify all the wood parts and hardware before assembling the cabinet.

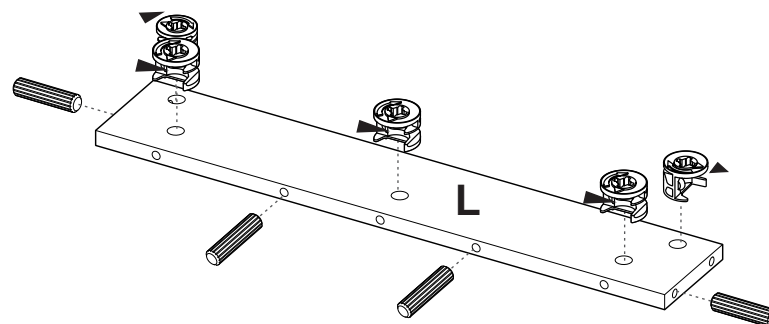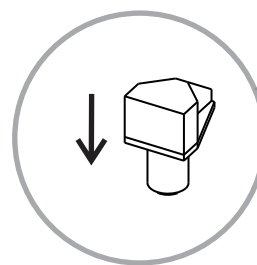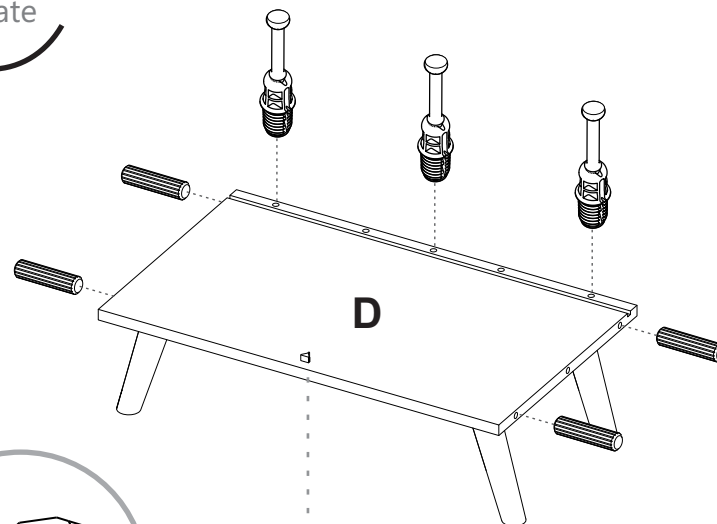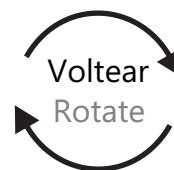


23

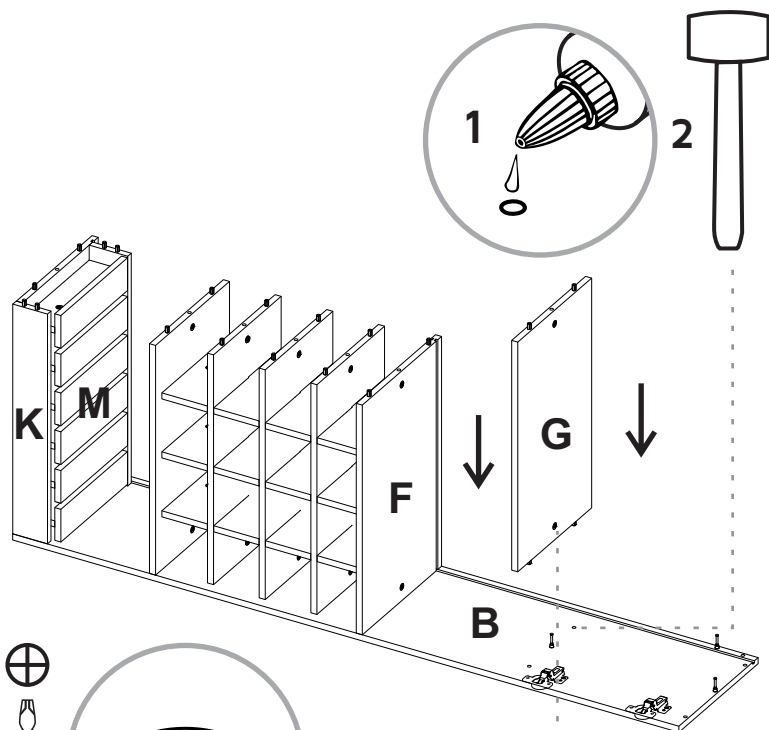


24

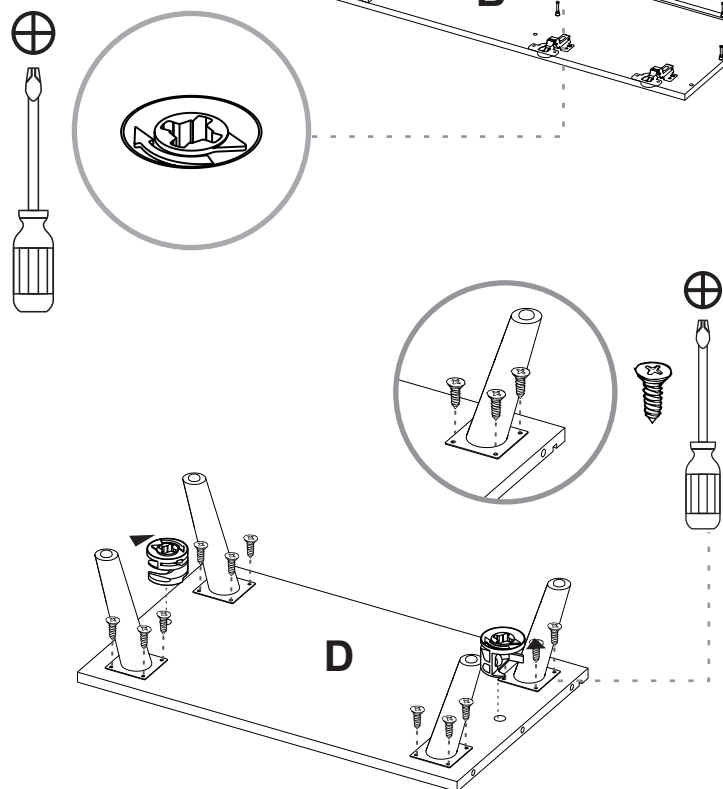


1

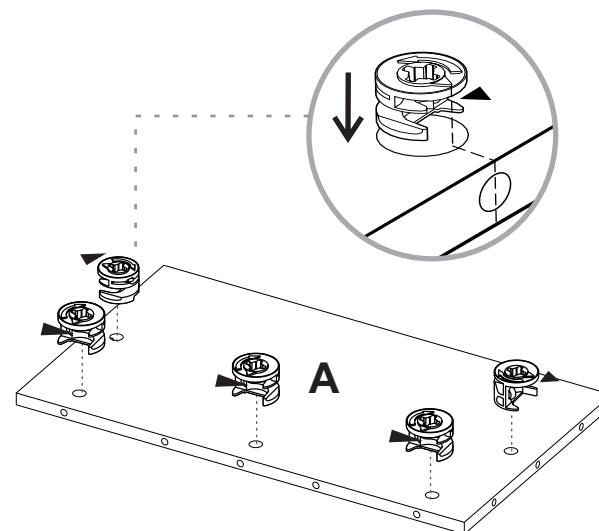


Repita esto en todos los ensambles
Repeat this in the following steps.

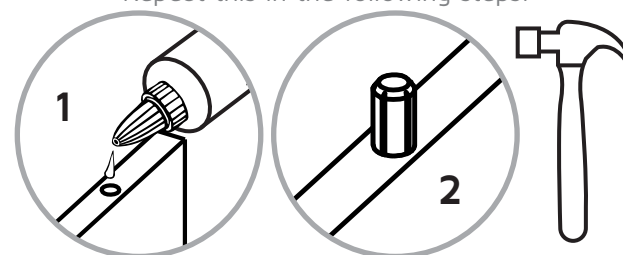



2

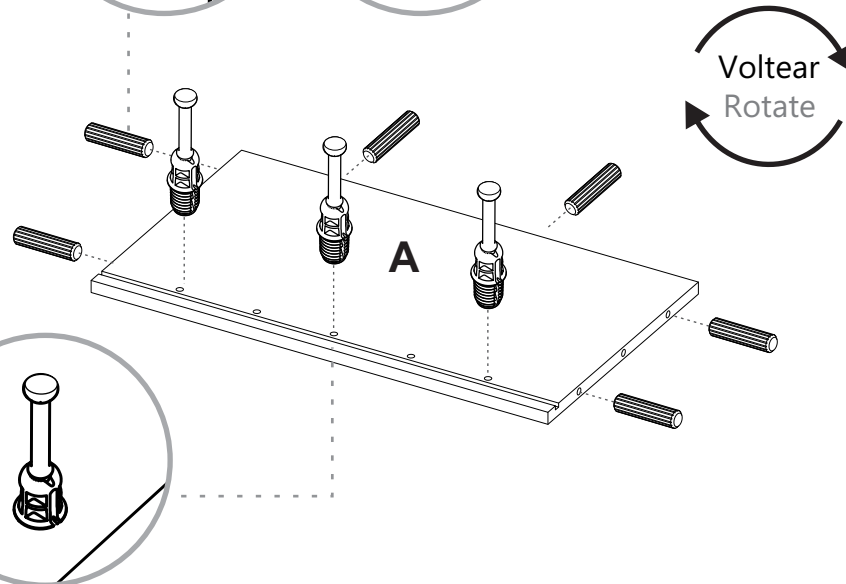

3

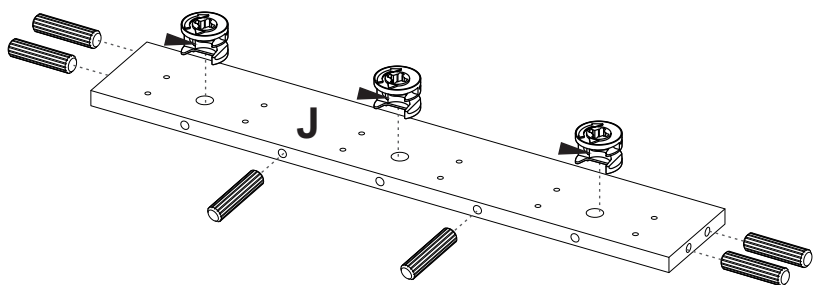


4

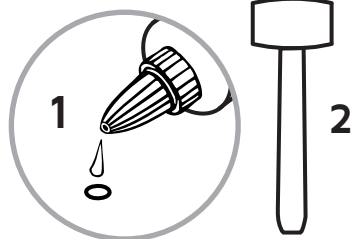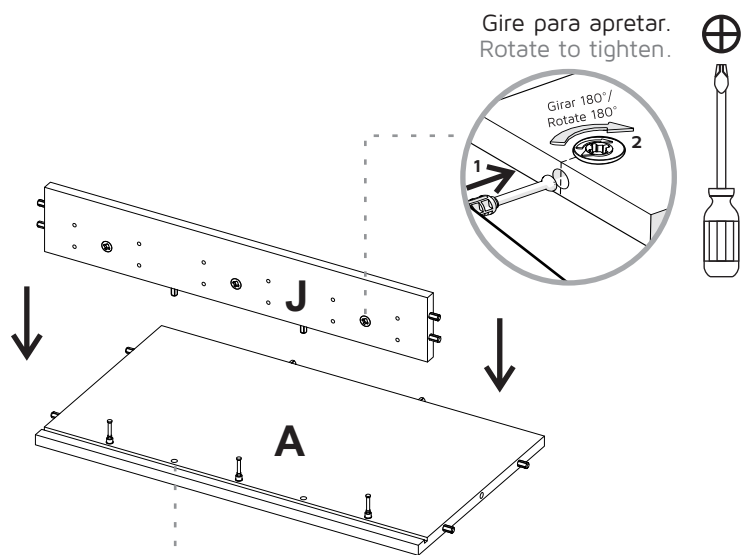


Aplice una gota de pegamento y golpee suavemente la pieza para ajustar el ensamble. Repita esto en todos los ensambles

Gently hit the pieces with a rubber hammer to adjust the joint. Repeat this in the following steps.


21

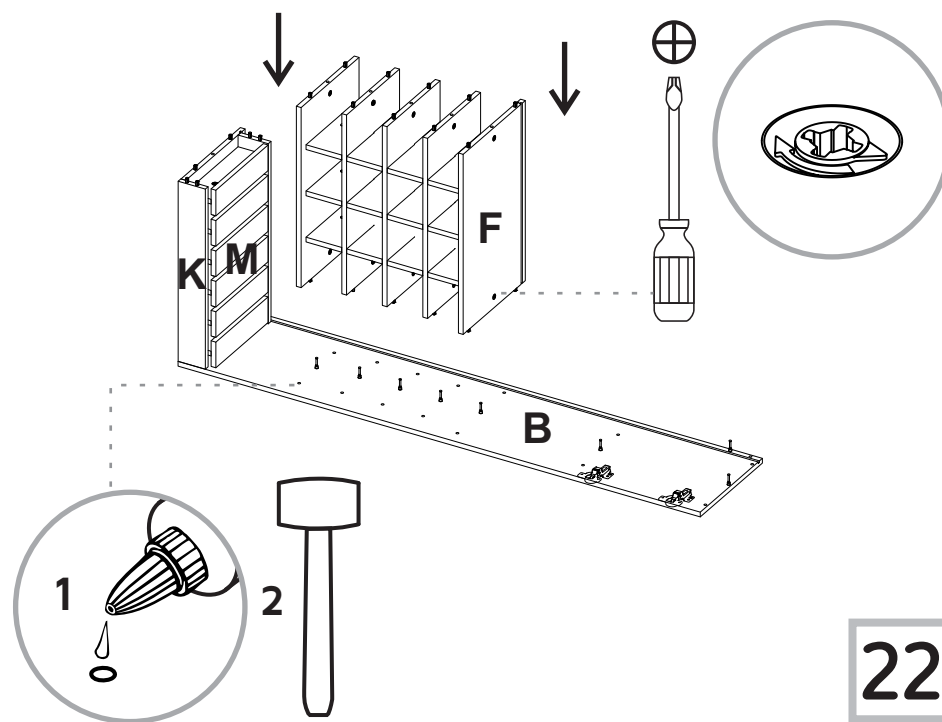


22

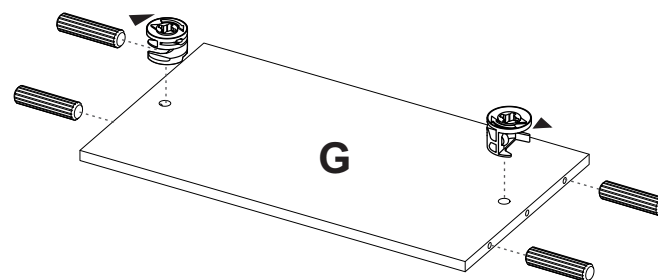


19

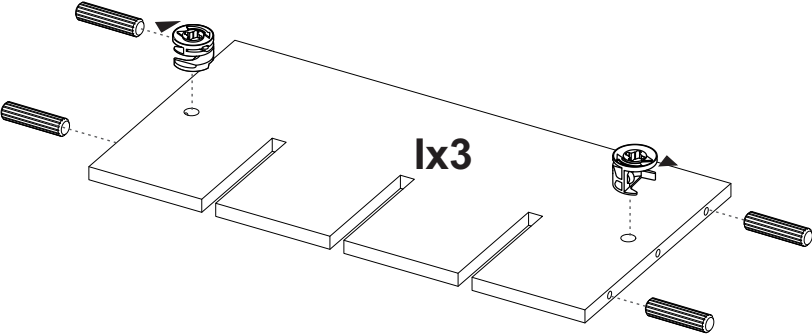


5

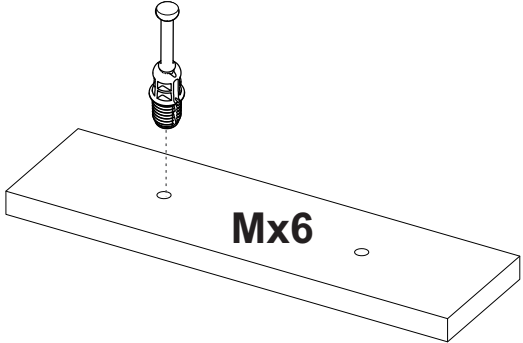

20 x3

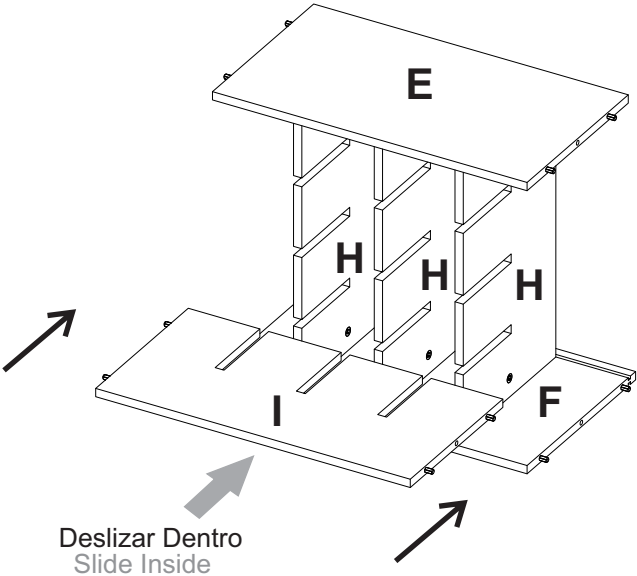


6



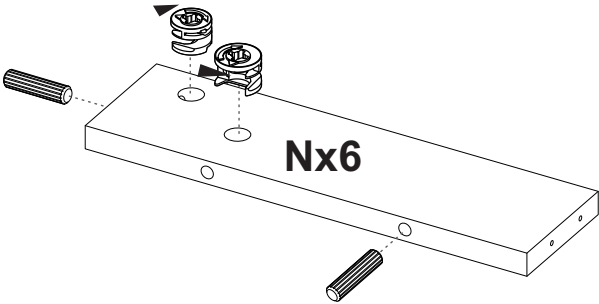


7



x6

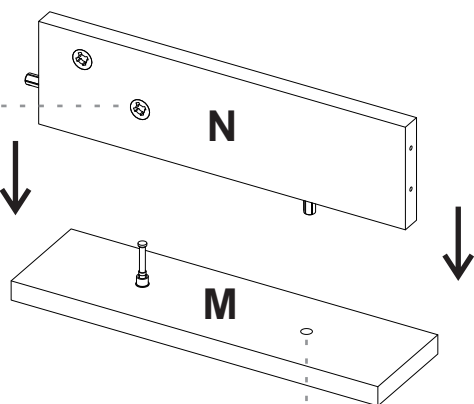





8

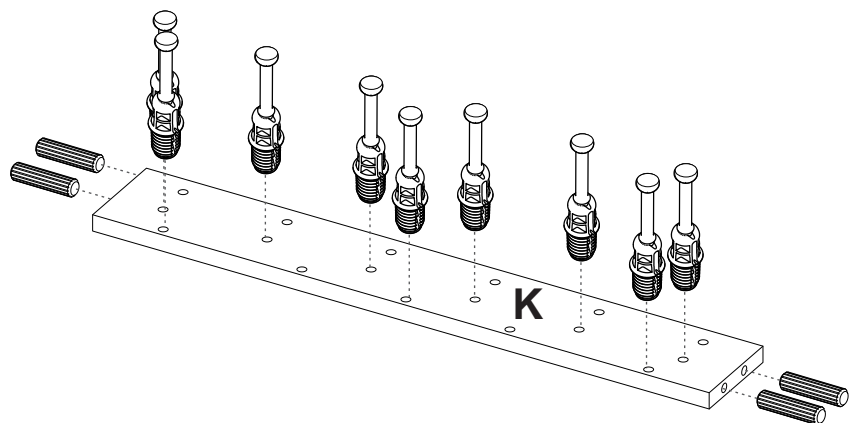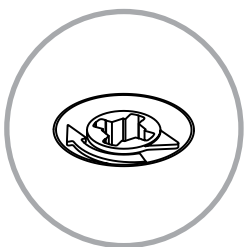


17

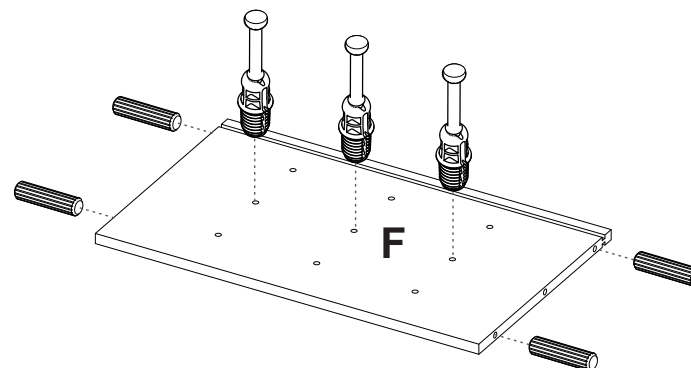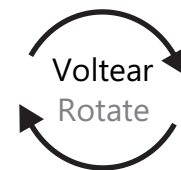


18

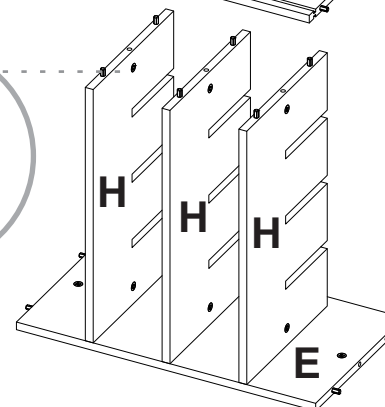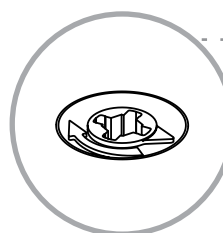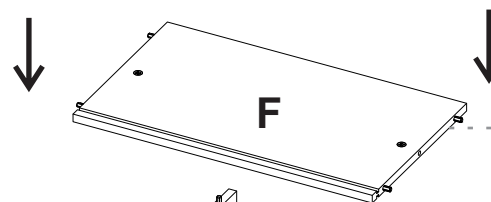

15 **x3**

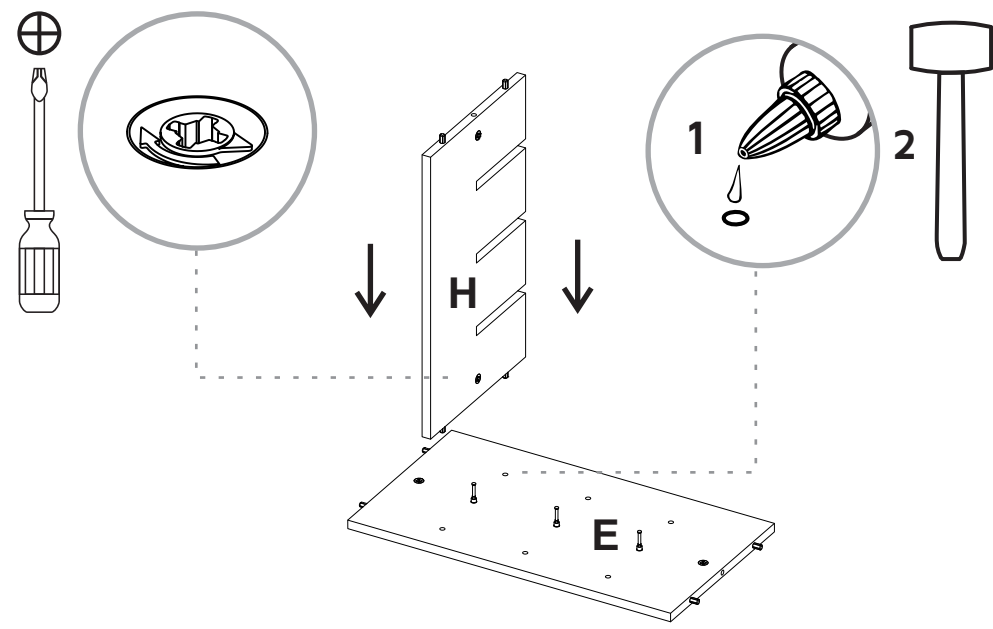


16

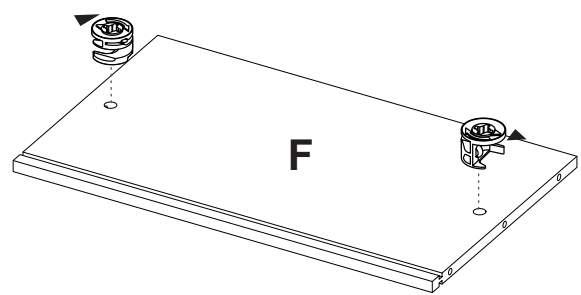


9


x6

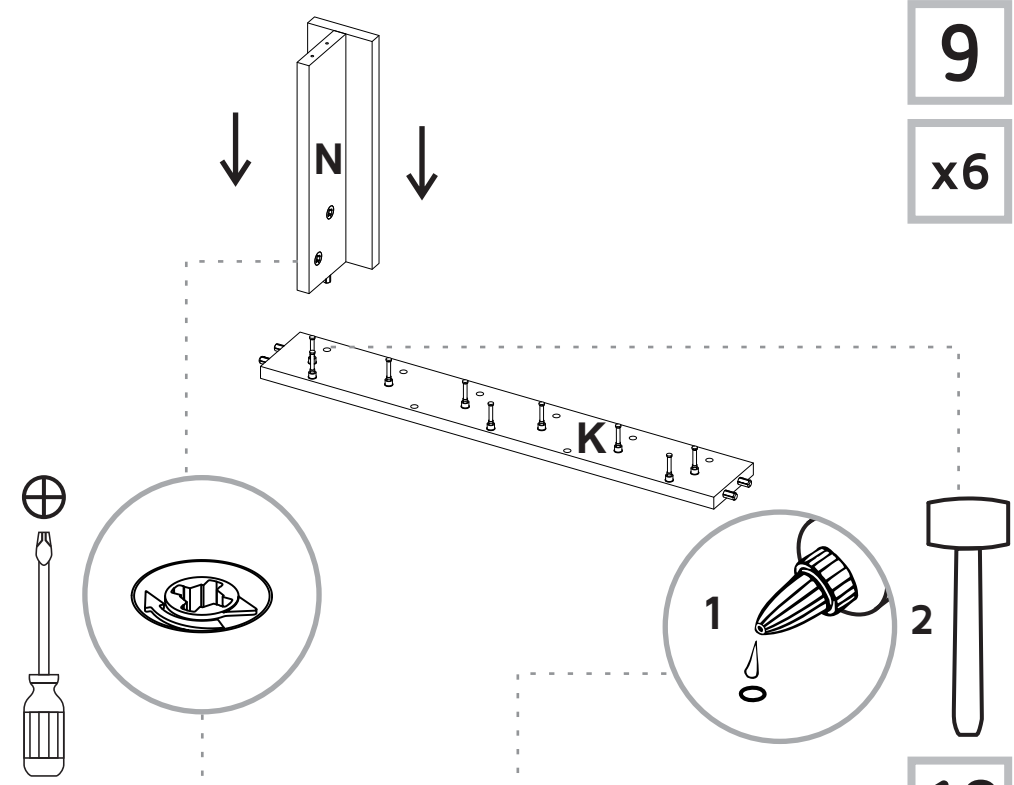


10

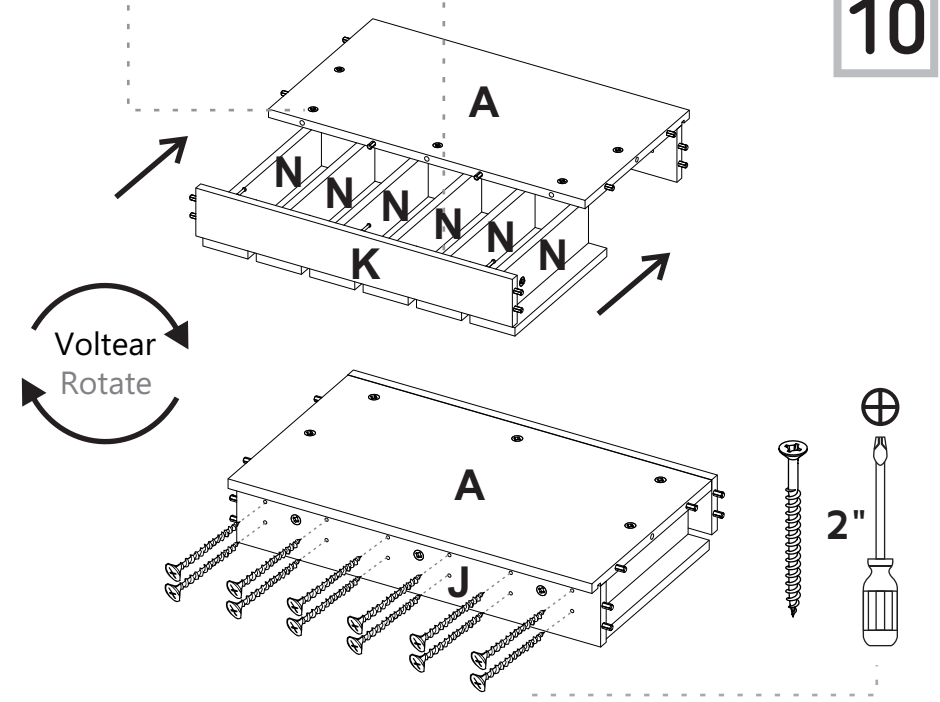


11

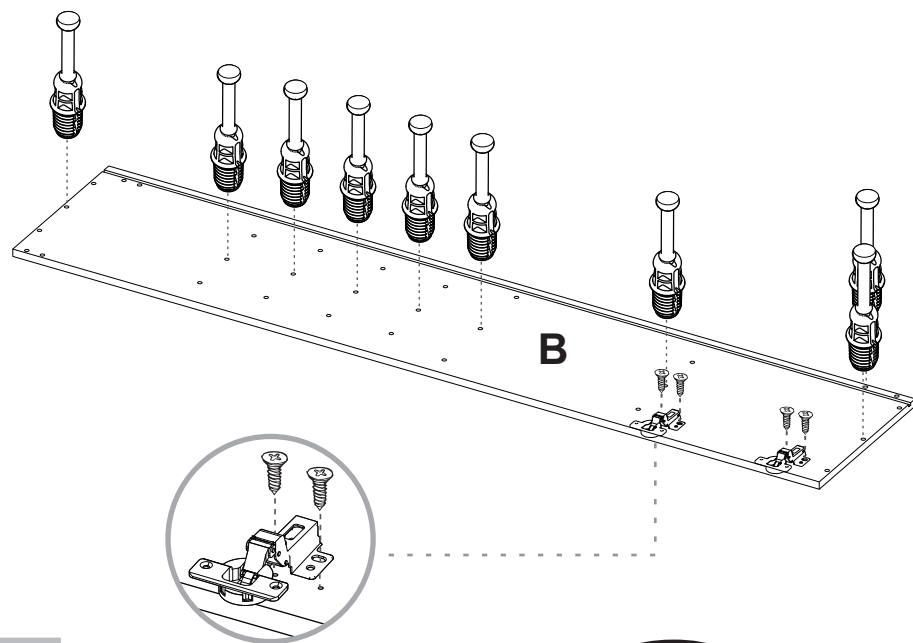

12

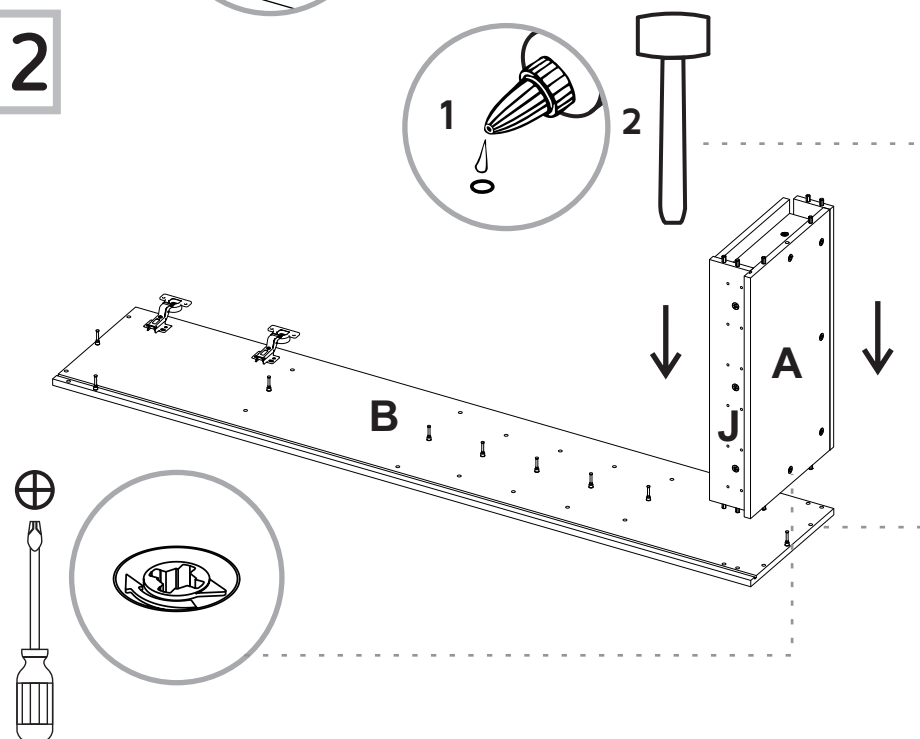

13

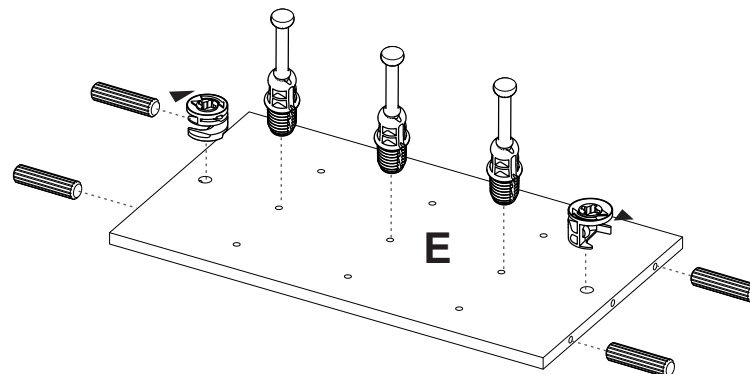

14

